

# OnSite™ 19"/15U Wall Rack Model WR-15U

1.	OVERVIEW	1
2.	APPLICATIONS	1
3.	DESCRIPTION	2
4.	INSTALLATION	2
5.	TESTING AND TROUBLESHOOTING	5
6.	CUSTOMER SERVICE	5
7.	WARRANTY & REPAIRS	5
8.	SPECIFICATIONS	F

#### 1. OVERVIEW

Enginuity's OnSite™ Model WR-15U (Figures 1 and 2) is a wall-mounted equipment rack that supports up to fifteen 19-inch rack units (15U) in a compact footprint. Cable management options include side-mounted guides for cable grooming and take-up reels for cable slack. The carrier-class assembly is an ideal fit for equipment rooms, cabinets, or customer premises locations.

## **Document Status**

This document has been reissued to correct dimensions in the Specifications section.

#### **Product Features**

- 15U height for 19-inch rack-mounted equipment
- · Easily installed on a wall or backboard
- · Welded, carrier-class design
- Optional side-mounted cable guides and take-up reels
- Reduces wall space requirements for multi-chassis applications
- Symmetrical frame design enables mounting with ground connections facing upward or downward

## 2. APPLICATIONS

For service delivery, the WR-15U allows carriers to securely wall mount rack-based equipment in equipment rooms, cabinets, or on customer premises. The WR-15U offers the following technician-friendly solutions:

# **Rack-Mount Compatibility**

The WR-15U supports any combination of standard 19-inch rack-based equipment, up to a total of fifteen rack

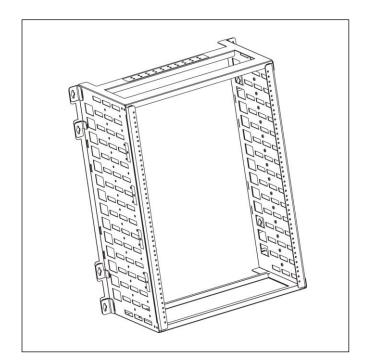


Figure 1. WR-15U Wall Rack

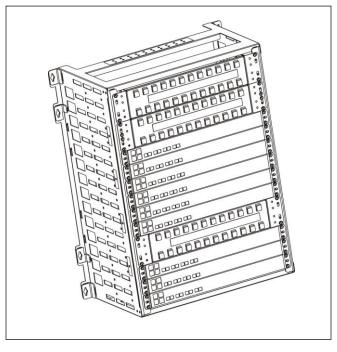


Figure 2. WR-15U w/ equipment installed (example)

units high. The mounting arrangement provides the density benefits of a floor rack, but in a compact wall-mounted footprint that requires only a single technician to install.

## **Cable Management**

Cable guides can be installed on either side of the WR-15U to groom cables from the front of each equipment chassis back to the wall. A package of five cable guides is available as Model CG-5.

Side plates with cable take-up reels can be added to store excess cable length being fed to installed equipment. Model SPL-4H mounts to either side of the WR-15U and includes two adjustable, split reels.

#### 3. DESCRIPTION

The WR-15U (Figure 3) features welded steel, carrier-class construction. The front of the frame provides two vertical rails with standard threaded hole spacing for up to fifteen rack units. Ten pairs of threaded grounding holes and pre-installed screws are provided on the rear crossbar for attachment of ground lugs. One pair of holes supports grounding of the WR-15U itself and the other nine pairs of holes support ground connections from installed equipment. The unpainted grounding area provides metal-to-metal contact with ground lug surfaces.

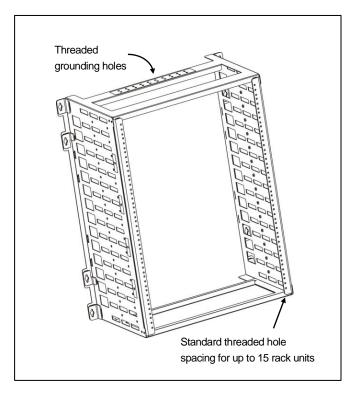


Figure 3. WR-15U Features

#### **Cable Guides**

Optional cable guides with removable covers (Figure 4) can be attached to either side of the WR-15U frame. Up to fifteen cable guides can be installed per side.

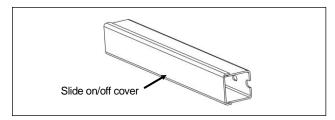


Figure 4. Cable guide

# Side Plate with Take-up Reels

An optional side plate, Model SPL-4H (Figure 5), provides two adjustable cable take-up reels. The reels are sized to maintain proper bend radius in fiber applications. One or two plates can be attached to either side of the WR-15U frame using the included hardware.

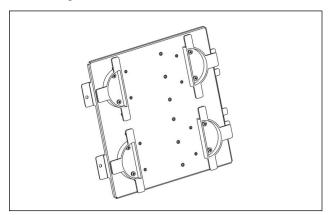


Figure 5. Model SPL-4H Side Plate

## 4. INSTALLATION

The WR-15U shipping carton contains the following:

- Pre-assembled mounting frame
- Ten (10) #12 x 1" slotted hex screws, self-tapping
- Product documentation
- Drill template

Installation steps are described in detail below.

## A. Mounting frame

① Verify the drill template with the WR-15U and mark up as needed before proceeding. Exposure to humidity and temperature variations may impact the paper size and accuracy of the template.

001-01-000091 Rev. 003 Page 2 of 6

- ② Select an appropriate location on a wall or backboard to install the mounting frame. Choose a mounting surface and hardware that can support the combined weight of the mounting assembly and equipment that is to be installed. Mounting to a 3/4" thick backboard with #12 x 1" screws is recommended. Maximum weight holding capacity of the WR-15U is 200 lbs.
- ③ Determine the desired orientation of the ground lugs. The symmetrical design of the WR-15U frame allows it to be installed with the grounding holes facing upward or downward.
- Tape the drill template to the wall ensuring it is level. The drill template provides information for multiple wall mounted racks. Be sure to use the hole symbol ©. Drill ten (10) 3/16" pilot holes. These holes mate with the mounting brackets located at the rear of the frame. The frame will be fastened with two screws in the topmost bracket on each side and one screw in each of the other brackets, as shown in Figure 6.

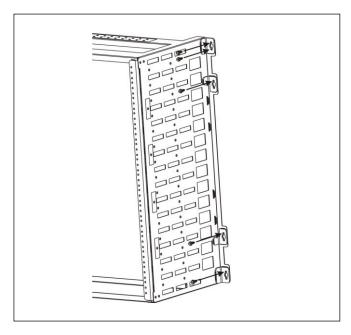


Figure 6. Mounting screw locations

- S Before attempting to fasten the mounting frame to the wall, insert a screw into the top pilot hole on either the left or right side. Partially thread the screw into the hole, leaving the screw head approximately 1/4" from the surface.
- ⑥ Hold the mounting frame against the wall while resting the cutout of the bracket on the installed screw. Align the other nine mounting holes and install a screw in each hole. Tighten all ten (10) screws securely.

## **B.** Frame grounding

- ① Locate the ten (10) pairs of pre-installed grounding screws with lock washers on the crossbar of the frame. The grounding screws are 10-32 x 3/8" on 5/8" centers.
- ② Install a dual ground lug (customer provided) with holes on 5/8" centers beneath the included screws and washers on one pair of grounding holes. Tighten the screws to fasten the lug to the mounting frame. The example in Figure 7 illustrates the frame positioned with grounding screws facing downward.
- ③ Connect a ground wire of appropriate gauge to the ground lug and attach the other end of the wire to a bonded ground point, per local procedures for network equipment.

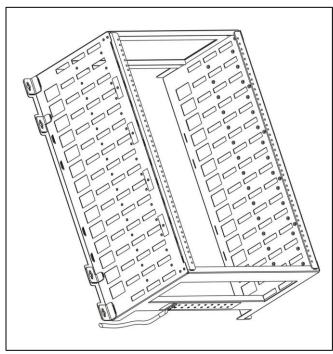


Figure 7. Frame grounding example

## C. Equipment Installation

- ① Install rack equipment with 19" hole spacing by carefully sliding the chassis through the front of the WR-15U and aligning chassis mounting ears with the threaded holes in the rails of the WR-15U frame. Insert and tighten #12-24 machine screws (customer provided) on each side of the chassis. An example of a fully populated wall rack is shown in Figure 2.
- ② Attach ground lugs associated with each equipment chassis to the threaded ground holes on the WR-15U crossbar as needed.

001-01-000091 Rev. 003 Page 3 of 6

# **D. Optional Cable Guide Installation**

- ① To install a cable guide to the side of the mounting, first remove the sliding cover from the cable guide. Insert two of the #10-32 x 3/8" screws (included in CG-5 package) through the cable guide and into the threaded holes on the side of the WR-15U frame (Figure 8).
- ② Groom cabling from the front of the chassis to the wall through the cable guide on the side of the WR-15U, as shown in Figure 9, and replace the sliding cover.

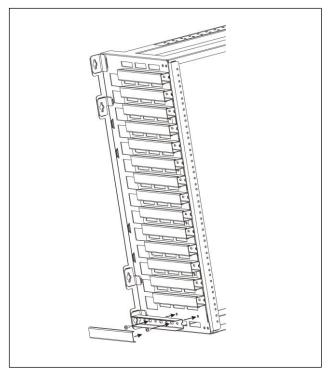


Figure 8. Cable guide installation

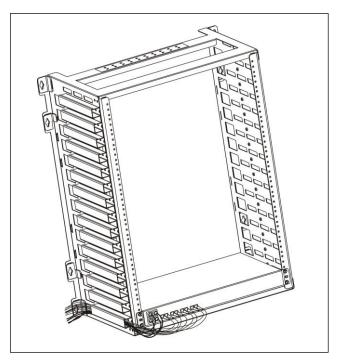


Figure 9. Cable guide application

001-01-000091 Rev. 003 Page 4 of 6

## E. Optional Side Plate Installation

One or two side plates (Model SPL-4H) can be installed on either side of the WR-15U chassis for cable slack management. The SPL-4H provides two split and adjustable take-up reels, as illustrated in Figure 5.

To install and use the SPL-4H side plate, refer to Figure 10 and the steps below.

- ① Slide the two narrower tabs at the edge of the SPL-4H into the openings on the side of the WR-15U, toward the rear of the mounting.
- ② Align the wide tabs at the front edge of the SPL-4H with the threaded holes on the side of the WR-15U frame. Use the two (2) included #10-32 x 3/8" screws to securely fasten the side plate to the frame.
- ③ Carefully wrap cables around the take-up reels to reduce slack as needed. Example routing is shown in Figure 11. Alternate mounting holes are included on the side plate for repositioning the half-reels, if desired.

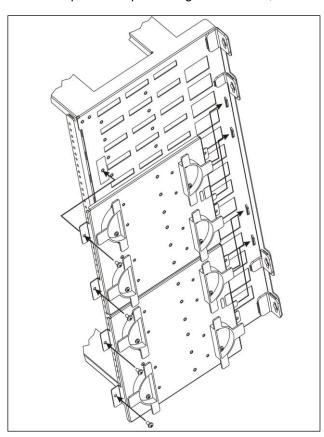


Figure 10. SPL-4H installation

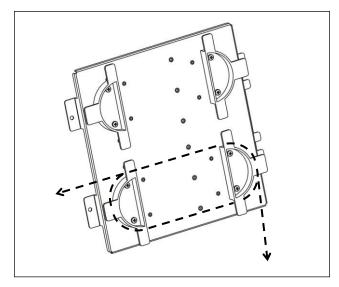


Figure 11. Cable take-up reel routing

#### 5. TESTING AND TROUBLESHOOTING

Each piece of equipment installed in the WR-15U should be tested according the manufacturer's instructions.

## 6. CUSTOMER SERVICE

If technical or customer assistance is required, please contact Enginuity at the following:

Customer Service	1-800-980-3266 sales@enginuitycom.com		
Technical Support	1-800-841-1005 support@enginuitycom.com		
Enginuity Communications 3545 Stern Avenue St. Charles, Illinois 60174 www.enginuitycom.com			

001-01-000091 Rev. 003 Page 5 of 6

## 7. WARRANTY & REPAIRS

# Warranty

Enginuity warrants this product for one (1) year from date of purchase. Any attempt to repair or modify the equipment by anyone other than an authorized Enginuity representative will void the warranty.

This limited warranty does not cover any losses or damages resulting from shipment to or from the customer, or from improper installation, abuse, modifications, or unauthorized repair by other than Enginuity personnel.

## Repair and Return

Enginuity equipment will be repaired or replaced without cost during the warranty period if the product is defective

for any reason other than abuse, improper use, or improper installation. Before returning defective equipment, first request a Return Material Authorization (RMA) number from Enginuity. Once an RMA number is obtained, return the unit, freight prepaid, along with a brief description of the problem, to:

Enginuity Communications 3545 Stern Avenue St. Charles, Illinois 60174 ATTN: Repair & Return Dept.

Replacements will be shipped in the fastest manner consistent with the urgency of the situation. Repair or replacement of faulty equipment beyond the warranty period is available for a nominal charge.

## 8. SPECIFICATIONS

## **Mounting Frame**

Part Number	WR-15U
Description	OnSite™ 19"/15U wall rack
Dimensions (H x W x D)	28.0 x 22.7 x 12.6 inches
Weight	18.0 pounds
Capacity	15 rack units, total installed equipment weight not to exceed 200 lbs.
Operating Temperature	0 to 50°C
Standards Compliance	Meets applicable Telcordia NEBS requirements, including Zone 4 seismic.

# **Optional Side Plate**

Part Number	SPL-4H
Description	Side plate for wall rack with (2) adjustable take-up reels
Dimensions (H x W x D)	10.5 x 11.3 x 1.3 inches
Weight	2.5 pounds

#### **Additional Cable Guides**

Part Number	CG-5
Description	Pack of (5) cable guides for wall rack
Dimensions (H x W x D)	1.0 x 1.3 x 7.8 inches (each)
Weight	2.0 ounces (each)

001-01-000091 Rev. 003 Page 6 of 6